 


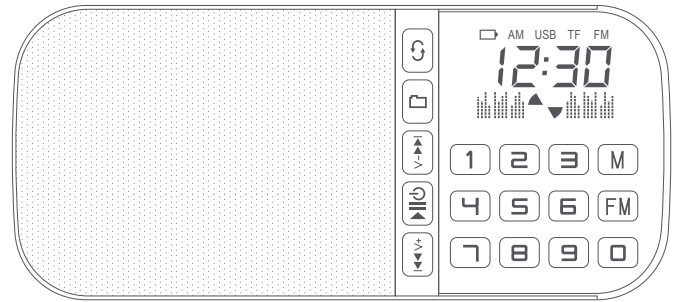

PORTABLE AM/FM RADIO WITH USB PORT

USER MANUAL



Thank you for purchasing a Buddee Portable AM/FM Radio. For optimum performance and safety read these instructions carefully before connecting, operating or adjusting this product. Refer to this manual for future reference.

INTRODUCTION

Listen to the radio or your music on the go through the speaker or headphone jack of this portable and compact AM/FM radio from Buddee. Play MP3 files via TF/microSD card or USB flash drive. Use the portable radio as a backup battery with 600mAh capacity and recharge any standard USB device wherever you are.

FEATURES

- AM/FM radio: Listen to your favourite radio stations wherever you are.
- MP3 player: Play MP3 files via TF/microSD card or USB flash drive.
- Headphone jack
- Rechargeable battery

PACKAGE CONTENTS

Before attempting to use this unit, check the packaging and make sure the following items are contained in the shipping carton:

- Main unit (Portable AM/FM radio)
- Mini-USB charging cable
- User manual

DEVICE FUNCTIONS

- Play/pause, hold to power ON/OFF
- Next song/radio station, hold to increase volume/fast forward
- Previous song/radio station, hold to decrease volume/rewind
- M** Switch modes: Clock, TF/MicroSD, USB, AM/FM. Hold to automatically search radio stations
- FM** FM mode, press to play/pause/mute, hold to automatically search radio stations
- Repeat: off/song/all
- Choose folder on memory card
- Select song or radio frequency
- DC.5V** Power supply, connect to your computer to use as speaker
- TF** Insert card to play MP3 files
- USB** Insert flash drive to play MP3 files, connect USB charging cable to recharge any standard USB charging device
- Headphone jack



Made in China

CHARGING

When the battery is low, the device will automatically shut down to conserve power. Connect the 5V DC end of the charging cable to the device and connect the USB end to your computer or USB wall charger.

This device has built in overcharge protection and can be safely used for a prolonged period while connected to power. It can be recharged while powered on or off. Full recharge will take approximately 3-4 hours.

Battery life is dependent on usage and music volume.

If the device is unused for a prolonged period, it is recommended that you recharge once a month to protect and prolong the battery life.

IMPORTANT SAFETY INFORMATION

Do not expose the battery to fire or high temperatures.

SETTING THE TIME

In Clock mode, hold M until the display flashes. Use the 0-9 buttons to set the correct hours. Press M again, the minutes will flash. Use 0-9 to set the correct minutes. Once the correct time is set, leave for 5 seconds, the display will stop flashing and the time will be saved

TECHNICAL SPECIFICATIONS

Output: 3W(RMR)

Frequency: 100Hz-18KHz

Input: DC5.0V 500mA

Battery: 3.7V 600mAh

Max current: 400mA

Impedance: 4 Ω

S/N: $d \geq 80$ dB

FM Frequency: 87.5-108MHz

AM Frequency: 530-1620MHz

FREQUENTLY ASKED QUESTIONS

Why won't my portable radio turn on/ why does my portable radio immediately turn off when I turn it on?

The battery is low, connect to power and recharge for at least two hours.

Why does my portable radio turn off or restart while in use?

The battery is low, connect to power and recharge for at least two hours.

Why is there no sound?

Check whether the radio is muted or whether the volume is turned down.

Why is there no sound after connecting the radio to my computer?

Check that the radio is connected to the correct port on your computer.

Why doesn't my radio respond, or why does it respond abnormally when I press a button?

Restart the radio and check whether normal function is restored.